



Rain Acculevel

Rainwater Level Sensor

What's in the box



Acculevel Gateway



Power Cable



Fixing Bracket



Acculevel Tank Sensor

Fixing the Tank Sensor into the tank

- Remove the sensor tube from the packaging
- Open the tank lid and remove the Rain Vantage Filter Cover
- Locate the holding point in the Rain Vantage Filter (Fig 1.1)
- Slide the black fixing bracket up the tube and fix to the underside of the sensor head (Fig 1.2)
- Sit the sensor tube on the holding point ensuring the tube is secure (Fig 1.3)



Fig 1.1



Fig 1.2

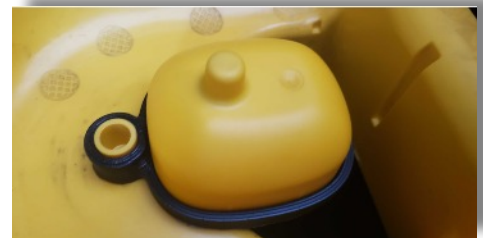


Fig 1.3



Watch the video

3 Word Code